


How to Measure for Roman blind

Before measuring for roman blinds you need to decide if you would like the blind sitting inside the window reses or outside the window reses. Roman blinds are normally fitting inside the window reses as then they can exclude most light and draft pollution. However, they can be fitted outside the window reses which allows the blind to be fitted higher than the window allowing more light in when the blind is up.

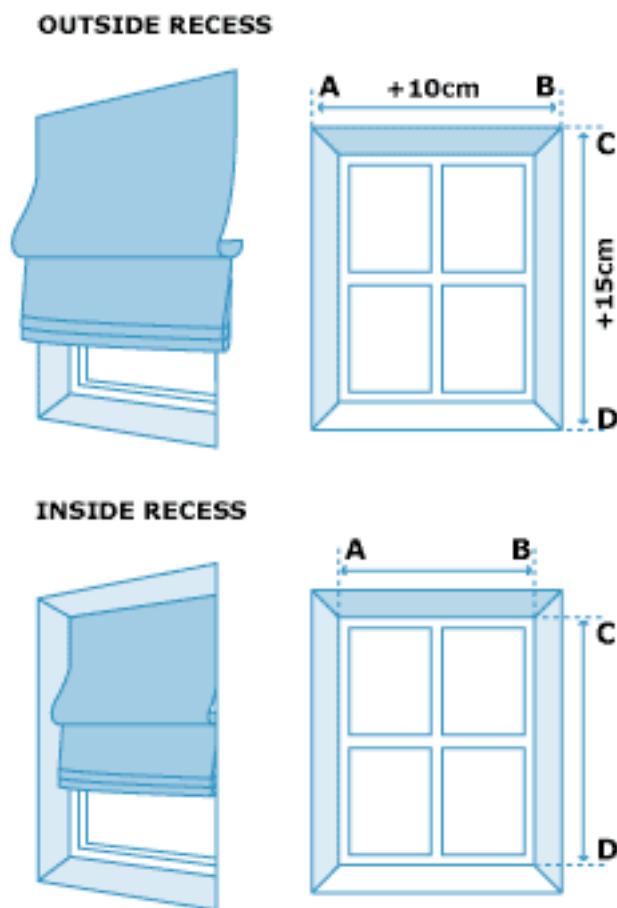

When measuring for outside the window reses you need to decide where you would like the blind positioned above the window. We recommend they are positioned about 10cm above the window, then measure to your desired length, which is usually just below the window sill when on the outside. For the width we recommend 5cm wider at each side, or the width of the window sill.

When measuring for inside the window reses you need to measure the length exactly and the width minus 1cm for clearance.

All our blinds are supplied on an enclosed head rail system with an operating chain. They can be top fixed or back fixed with the bracket provided and are also supplied with a chain safety device which should be fitted.

All the details above are only a guide and all lengths are your preferred choice. Lou's Thread interiors will not take any responsibility for measurements provided.